

# INTEX® OWNER'S MANUAL INFLATABLE BOAT

## IMPORTANT

**THIS BOOKLET CONTAINS IMPORTANT SAFETY  
INFORMATION. READ IT THOROUGHLY BEFORE USING  
THIS PRODUCT AND KEEP IT FOR FUTURE REFERENCE.**

## ISO-6185 BOAT DESIGN CATEGORY D

Due to a policy of continuous product improvement, Intex reserves the right to change specifications and appearance, which may result in updates to the instruction manual without notice.

**INTEX®**

©2024 Intex Marketing Ltd. - Intex Development Co. Ltd. - Intex Recreation Corp. All rights reserved/Tous droits réservés/Todos los derechos reservados/Alle Rechte vorbehalten. Printed in China/Imprimé en Chine/Impreso en China/Gedruckt in China.  
®™ Trademarks used in some countries of the world under license from/®™ Marques utilisées dans certains pays sous licence de/Marcas registradas utilizadas en algunos países del mundo bajo licencia de/Warenzeichen verwendet in einigen Ländern der Welt in Lizenz von/  
Intex Marketing Ltd. to/à/a/an Intex Development Co. Ltd., Hong Kong & Intex Recreation Corp., P.O. Box 1440, Long Beach, CA 90801 • Distributed in the European Union by/Distribué dans l'Union Européenne par/Distribuido en la unión Europea por/Vertrieb in der Europäischen Union durch/Intex Trading B.V., Ettenseweg 46, 4706 PB Roosendaal - The Netherlands • Distributed in the UK by Unitex Service (UK) Limited, 21 Holborn Viaduct, London EC1A 2DY, UK.  
[www.intexcorp.com](http://www.intexcorp.com)

098-\*A\*-R0-2505

## **TABLE OF CONTENTS**

**98  
A**

|                                        |       |
|----------------------------------------|-------|
| INTRODUCTION.....                      | 3     |
| MANUFACTURER'S CERTIFICATION.....      | 3     |
| SAFETY & WARNING.....                  | 3     |
| MANUFACTURER'S RECOMMENDATION.....     | 4     |
| DESCRIPTION.....                       | 5-7   |
| INFLATING INSTRUCTIONS.....            | 8     |
| HOW TO USE BOSTON VALVE.....           | 8     |
| FISHING ROD HOLDER USE.....            | 9     |
| OAR ASSEMBLY.....                      | 9-10  |
| GRAB LINE INSTALLATION.....            | 11    |
| ACCESSORY LINE INSTALLATION.....       | 11    |
| SAFETY AND OPERATION INSTRUCTIONS..... | 11-12 |
| CARE AND MAINTENANCE.....              | 12    |
| DISASSEMBLY AND STORAGE.....           | 13    |
| TROUBLESHOOTING.....                   | 13    |
| REPAIRS.....                           | 13    |
| LIMITED WARRANTY.....                  | 14    |

# **SAVE THESE INSTRUCTIONS**

## Introduction

This manual has been compiled to help you to operate your craft with safety and pleasure. It contains details of the craft, the equipment supplied or fitted, its systems, and information on its operation and maintenance. Please read it carefully, and familiarize yourself with the craft before using it.

If this is your first craft, or you are changing to a type of craft you are not familiar with, for your own comfort and safety, please ensure that you obtain handling and operating experience before assuming command of the craft. Your dealer or national sailing federation or yacht club will be pleased to advise you of local sea school, or competent instructors.

PLEASE KEEP THIS MANUAL IN A SECURE PLACE, AND HAND IT OVER TO THE NEW OWNER WHEN YOU SELL THE CRAFT. RECORD THE "WATERCRAFT IDENTIFICATION NUMBER" (WIN) WHICH IS PRINTED ON THE BOAT'S HULL IN THE FOLLOWING BOX:

**WIN:** \_\_\_\_\_

## Manufacturer's Certification

For boats between and including 2.5 and 24 meters hull length, a **CE** (FOR EUROPE ONLY) mark means that the boat complies with European Directives for Recreational Craft 2013/53/EU as published by the International Organization for Standardization, ISO 6185.

**NMMA** (FOR USA ONLY) certification means that the boat, sold in the United States, has been judged by the National Marine Manufacture's Association to be in compliance with the U.S. Coast Guard Regulations and American Boat and Yacht Council (ABYC) standards and recommended practices.

## Safety

**Boat Design Category D - "SHELTERED WATERS"**:- Designed for voyages on sheltered coastal waters, small bays, small lakes, rivers and canals when conditions up to, and including, wind force 4 and significant wave heights up to, and including, 0.3 m may be experienced, with occasional waves of 0.5 m maximum height, for example from passing vessels.



## WARNING

- This is not a life saving device. Use only under competent supervision. Never allow diving into this product. Never leave in or near the water when not in use. **Never tow from any vehicle.**
- Read the complete Owner's Manual before use and store this Manual in a safe place for future reference.
- Follow all the Safety and Operating Instructions on this Manual.
- TYPE II, inflatable boats capable of taking an outboard motor. Motors are not to exceed the maximum recommended power and weight.
- Rotating propeller may cause serious injury or death. Shut off engine when near persons in the water.
- Read the instruction of outboard motor for correct installation and operation.
- **Beware of offshore winds and currents.** Never navigate alone.
- Do not exceed the maximum recommended capacities. Overloading violates regulations.
- Everyone on board must wear a Personal Floatation Device (PFD).
- Use caution when stepping or climbing aboard the boat. Step into the center of the boat for maximum stability.
- Distribute the weight of passengers, gear, tackle box, and accessories so that the boat sits level fore (front) to aft (back) and side-to-side.
- Do not use your boat if you suspect a puncture or leak.
- Adults should inflate the chambers in numbered sequence.
- Not for white water rafting or any other extreme sports activities.
- Not for commercial or rental use.
- Follow these rules to avoid drowning, paralysis or other serious injuries.

# SAVE THESE INSTRUCTIONS

## Manufacturer's Recommendation

98  
A

The total number of persons, motor power and total weight shall not exceed the limits printed on the boat. Please refer to the boat's hull label for the actual values of your boat. See Table A.

TABLE A

| MODEL              | TYPE | L <sub>h</sub> | B <sub>h</sub> |  |  +  |  |  | Unladen Craft Weight |
|--------------------|------|----------------|----------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|----------------------|
|                    |      | m              | m              | HP                                                                                | kg                                                                                                                                                                    |                                                                                   | bar (psi)                                                                         | kg                   |
| CHALLENGER 3 / SET | II   | 2.95           | 1.37           | 1.5                                                                               | 320                                                                                                                                                                   | 3                                                                                 | 0.035 (0.5)                                                                       | 9                    |
| SEAHAWK 2 / SET    | II   | 2.36           | 1.14           | 1.5                                                                               | 240                                                                                                                                                                   | 2                                                                                 | 0.069 (1.00)                                                                      | 6                    |
| SEAHAWK 3 / SET    | II   | 2.95           | 1.37           | 1.5                                                                               | 360                                                                                                                                                                   | 3                                                                                 | 0.069 (1.00)                                                                      | 11                   |
| SEAHAWK 4 / SET    | II   | 3.51           | 1.45           | 1.5                                                                               | 480                                                                                                                                                                   | 4                                                                                 | 0.069 (1.00)                                                                      | 17                   |
| EXCURSION 4 / SET  | II   | 3.15           | 1.65           | 1.5                                                                               | 500                                                                                                                                                                   | 4                                                                                 | 0.069 (1.00)                                                                      | 19                   |
| EXCURSION 5 / SET  | II   | 3.66           | 1.68           | 1.5                                                                               | 600                                                                                                                                                                   | 5                                                                                 | 0.069 (1.00)                                                                      | 22                   |
| MARINER 3 / SET    | II   | 2.97           | 1.27           | 2                                                                                 | 400                                                                                                                                                                   | 3                                                                                 | 0.080 (1.14)                                                                      | 25                   |
| MARINER 4 / SET    | II   | 3.28           | 1.45           | 3                                                                                 | 500                                                                                                                                                                   | 4                                                                                 | 0.080 (1.14)                                                                      | 32                   |

## BOAT LABEL FORMAT


|                                                                                                                                                                                                                                                            |                                                                                                                                                                                                                                                                                 |                                                                                                                                                                                                                                                                                 |   |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|
| ISO 6185 PART 1 TYPE _____                                                                                                                                                                                                                                 | MAXIMUM CAPACITIES                                                                                                                                                                                                                                                              |  +  +  = ____ Kg ( ____ Lbs) | ③ |
| CATEGORY D                                                                                                                                                                                                                                                 | MAXIMUM-KAPAZITÄT                                                                                                                                                                                                                                                               |  +  +  = ____ Kg ( ____ Lbs) | ④ |
| Do not overinflate or use high pressure air compressor to inflate. Adults should inflate the chambers with cold air in numbered sequence.<br>Use the enclosed ruler to check while inflating.                                                              | MAXIMUM POWER                                                                                                                                                                                                                                                                   |  ____ kW ( ____ HP) / ____ Kg ( ____ Lbs)                                                                                                                                                      | ⑤ |
| Nicht zu stark aufblasen und keinen Kompressor zum Aufblasen verwenden.<br>Erwachsene sollten die Kammern in der angegebenen Reihenfolge mit kalter Luft aufblasen.<br>Verwenden Sie das beigegefügte Lineal um die korrekte Füllung zu überprüfen.        | MAXIMUM MOTORKRAFT                                                                                                                                                                                                                                                              |  ____ kW ( ____ HP) / ____ Kg ( ____ Lbs)                                                                                                                                                      | ⑥ |
| Ne pas surgonfler. Ne pas utiliser de compresseur pour le gonflage. Le gonflage doit être effectué par un adulte avec de l'air froid en suivant les étapes suivantes.<br>Utiliser la règle jointe pour ajuster le gonflage de la chambre à air principale. | PERSONS                                                                                                                                                                                                                                                                         |  = ____                                                                                                                                                                                        | ⑦ |
| BY INTEX®                                                                                                                                                                                                                                                  | PERSONEN                                                                                                                                                                                                                                                                        |  = ____                                                                                                                                                                                        | ⑧ |
| CE                                                                                                                                                                                                                                                         | PERSONNES                                                                                                                                                                                                                                                                       |  = ____                                                                                                                                                                                        | ⑨ |
| BY INTEX®                                                                                                                                                                                                                                                  | MANUFACTURER                                                                                                                                                                                                                                                                    | INTEX®                                                                                                                                                                                                                                                                          | ⑩ |
| BY INTEX®                                                                                                                                                                                                                                                  | HERSTELLER                                                                                                                                                                                                                                                                      | CHINA                                                                                                                                                                                                                                                                           | ⑪ |
| BY INTEX®                                                                                                                                                                                                                                                  | MODEL                                                                                                                                                                                                                                                                           | ____                                                                                                                                                                                                                                                                            | ⑫ |
| BY INTEX®                                                                                                                                                                                                                                                  | MODELE                                                                                                                                                                                                                                                                          | ____                                                                                                                                                                                                                                                                            | ⑬ |
| BY INTEX®                                                                                                                                                                                                                                                  | RECOMMENDED WORKING PRESSURE FOR EACH CHAMBER<br>EMPFOHLENE ARBEITSDRUCK FÜR JEDE LUFTKAMMER<br>RECOMMANDÉ FONCTIONNELLE PRESSION POUR CHAQUE CHAMBRE À AIR<br> = ____ bar ( ____ psi)         |                                                                                                                                                                                                                                                                                 | ⑭ |
| BY INTEX®                                                                                                                                                                                                                                                  | MAXIMUM CAPACITIES / CAPACITÉS MAXIMALES                                                                                                                                                                                                                                        |                                                                                                                                                                                                                                                                                 | ⑮ |
| BY INTEX®                                                                                                                                                                                                                                                  | PERSONS OR ____ kg ( ____ Lbs) / PERSONNES OU ____ KG<br>____ POUNDS, PERSONS, GEAR / ____ KG, PERSONNES ET ÉQUIPEMENT                                                                                                                                                          |                                                                                                                                                                                                                                                                                 | ⑯ |
| BY INTEX®                                                                                                                                                                                                                                                  | DESIGN COMPLIANCE WITH NMMA REQUIREMENTS BELOW IS VERIFIED. MFGR. RESPONSIBLE FOR PRODUCTION CONTROL.<br>LA CONFORMITÉ DU DESIGN AVEC LES EXIGENCES NMMA EST VÉRIFIÉE. MFGR. RESPONSABLE DU CONTRÔLE PRODUCTION.                                                                |                                                                                                                                                                                                                                                                                 | ⑰ |
| BY INTEX®                                                                                                                                                                                                                                                  | LOAD CAPACITY (BASIC FLOTATION)<br>CAPACITÉ DE CHARGE (FLOTATION DE BASE) ____ Kg ( ____ Lbs) MAX.<br>Certified by the National Marine Manufacturers Association using ABYC standards<br>Certifié par la National Marine Manufacturers Association en utilisant les normes ABYC |                                                                                                                                                                                                                                                                                 | ⑱ |
| BY INTEX®                                                                                                                                                                                                                                                  | CN-                                                                                                                                                                                                                                                                             | XEE                                                                                                                                                                                                                                                                             | ⑲ |

- ① ISO-6185 boat design category (certain models). ② CE mark (for Europe only) (certain models).  
 ③ Manufacturer's recommended maximum load capacity. ④ Maximum motor power and motor weight.  
 ⑤ Maximum person's capacity. ⑥ Manufacturer's name and country of origin.  
 ⑦ Model name and number. ⑧ Manufacturer's recommended working pressure.  
 ⑨ NMMA (for USA only) certification means that the boat, sold in the United States, has been judged by the National Marine Manufacturer's Association to be in compliance with the U.S. Coast Guard Regulations and American Boat and Yacht Council (ABYC) standards and recommended practices.  
 ⑩ Watercraft identification number (WIN).

# SAVE THESE INSTRUCTIONS

## Description


### Challenger Series

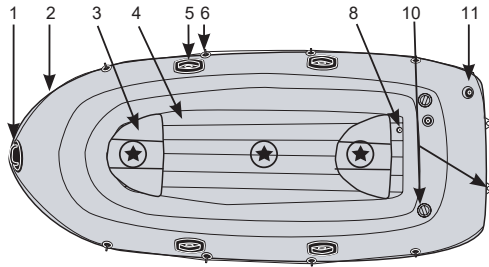


Challenger 3 / Set

"★" - Recommended seating arrangement of the occupants.


### Seahawk Series

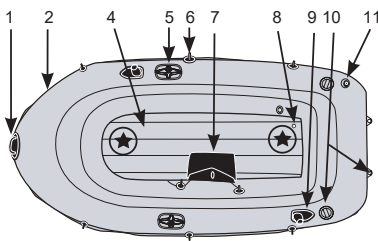

Seahawk 2 / Set

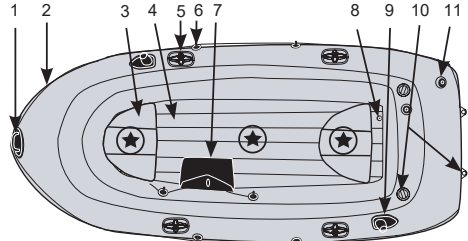

Seahawk 3 / Set

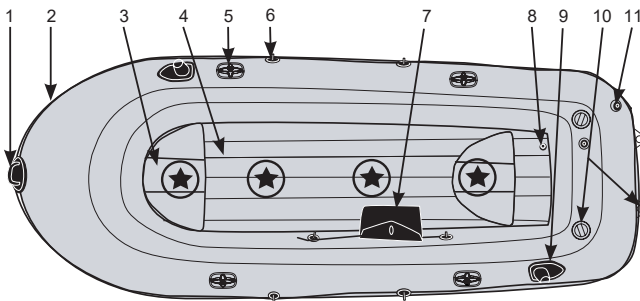


Seahawk 4 / Set


"★" - Recommended seating arrangement of the occupants.

## SAVE THESE INSTRUCTIONS

## Excursion Series

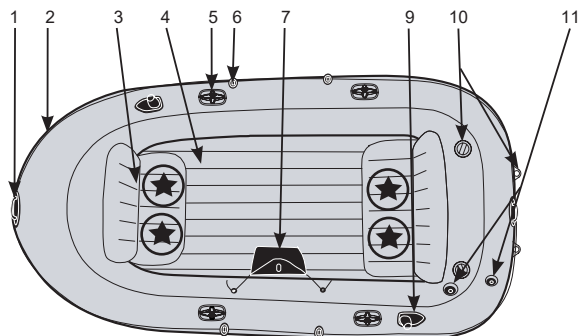

Excursion 4 / Set

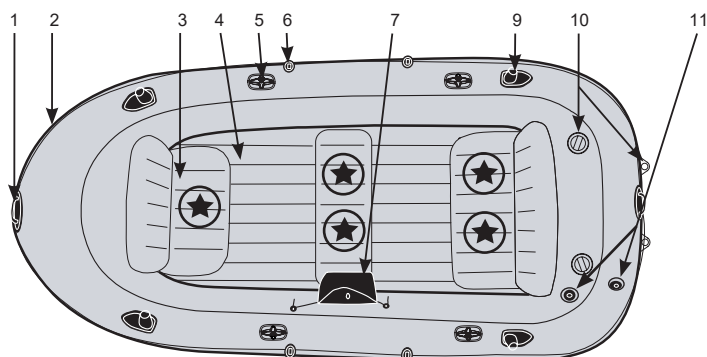


Excursion 5 / Set


"★" - Recommended seating arrangement of the occupants.

# SAVE THESE INSTRUCTIONS

Mariner 3 / Set

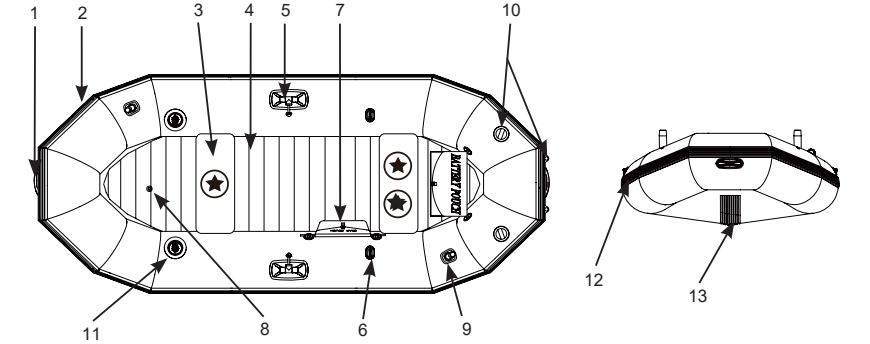

Mariner 4 / Set

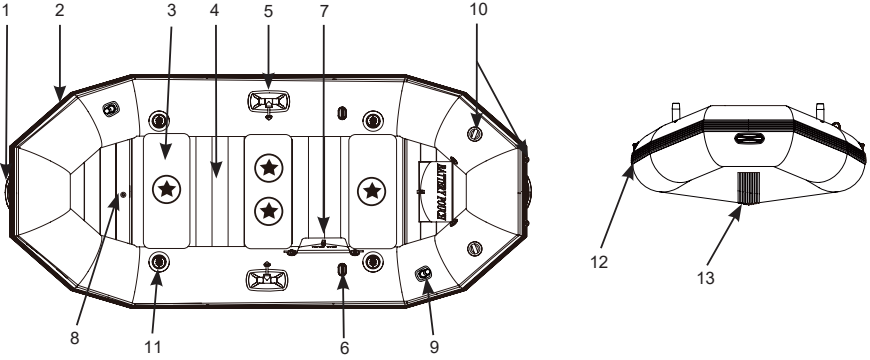

"★" - Recommended seating arrangement of the occupants.

| Descriptions |                                           |    |                              |
|--------------|-------------------------------------------|----|------------------------------|
| 1            | Grab handle                               | 8  | Inflation valve / Keel valve |
| 2            | All around grab line                      | 9  | Fishing rod holder           |
| 3            | Seat or seat cushion                      | 10 | Motor mount                  |
| 4            | Inflatable floor or removable slats floor | 11 | Boston valve                 |
| 5            | Oar lock                                  | 12 | Rock guard                   |
| 6            | Oar holder                                | 13 | Inflatable keel              |
| 7            | Gear pouch or accessory bag               |    |                              |

**NOTE:** Only use Intex Motor Mount Kit (#68624).  
Drawings for illustration purpose only. Actual product may vary. Not to scale.

**SAVE THESE INSTRUCTIONS**

## Inflating Instructions

Before starting, locate a clean area free of stones or other sharp objects. Unroll the boat so it is laid out flat, and locate your pump.


Use a hand or foot operated air pump to inflate the boat. Do not use high-pressure air compressors. Adults should inflate the chambers following the numerical sequence marked on the valves. It is very important to follow the numerical sequence; failure to do so will result in an improperly inflated boat. Fill each chamber until it is stiff to the touch but NOT hard. Use the enclosed ruler to check the main chamber for proper inflation. DO NOT OVER INFLATE. Fill with cold air only.

**IMPORTANT:** Air temperature and weather condition do affect the internal air pressure of inflatable products. In cold weather the product will lose some pressure due to the fact that the air will contract. If this occurs, you may want to add a little air to the product. However, in hot weather, the air will expand. You must let some air out to prevent the product from failing due to overpressure.


## How to Use Boston Valve:

1. Double valve cap (valve lets air in, not out).
2. Quick deflation cap.
3. Unscrew Double valve cap.
4. Insert output end of air pump into valve and fill. Do not over inflate or use high pressure compressor.
5. To deflate: unscrew quick-deflation cap. **CAUTION:** Double valve does not operate when this cap is off. Do not unscrew this cap while boat or inflatable is in water.

## **Challenger series / Seahawk series / Excursion series:**

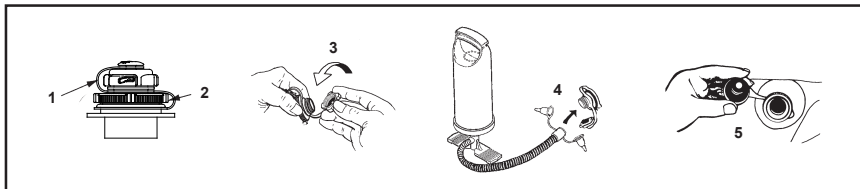

## **Mariner :**

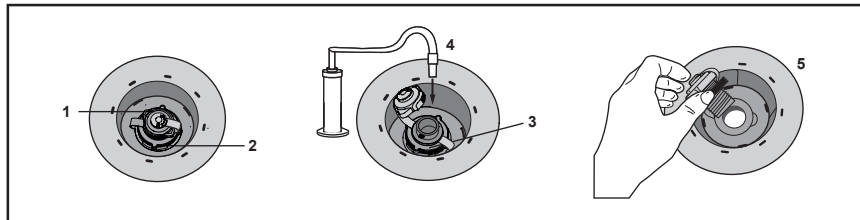


# SAVE THESE INSTRUCTIONS



**Seat Installation (Certain Models):**98  
A

1. Inflate each seat cushion slowly to about 75% of its capacity.
2. Attach the seat cushion hinge to the hinge on the boat. Repeat the connection on the other side and for all seats. See Fig A.
3. Finish inflating the seat cushions slowly until it is firm to the touch but NOT hard. DO NOT OVER INFLATE!
4. To disassemble the seats, deflate the seats first and reverse the installation procedures.


**NOTE:** Some seat cushions after inflation are tuck in directly into the fore, mid or aft locations of the boat cockpit. No hinges.

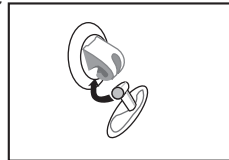**Mariner:**


1. Inflate each seat cushion slowly to about 75% of its capacity.
2. Put the seat cushions into the fore, mid or aft locations of the boat cockpit.
3. Finish inflating the seat cushions slowly until it is firm to the touch but NOT hard. DO NOT OVER INFLATE!
4. Seat cushions after inflation are tuck in directly into the fore, mid or aft locations of the boat cockpit.
5. To disassemble the seats, deflate the seats first and reverse the installation procedures.

**Fishing Rod Holder Use (Certain Models):**


1. Slide the end cap over the end of the fishing rod.
2. Insert the fishing pole into the holder.

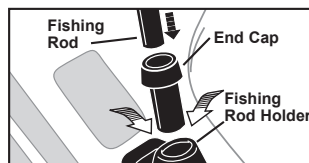**Mariner series:**

1. Slide the fishing rod holder into the mounting base.
2. Insert the end cap into the fishing rod holder.
3. Insert the fishing rod into the end cap.

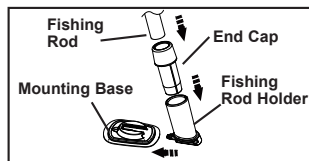
**Oar Assembly:**

1. Insert "Shaft A" with the pin end first into the blade. Make sure the pin is securely fastened to the blade.
2. Insert the assembled "Shaft A" through the oar-lock with the blade towards outboard (water).
3. Place the retainer ring onto the other end of "Shaft B", from inside of the boat.
4. Press the pin and insert shaft B into shaft A, make sure the pin is securely snapped into the hole.
5. When the oars are not in use secure the oars onto the oar holders located on each side of the boat.

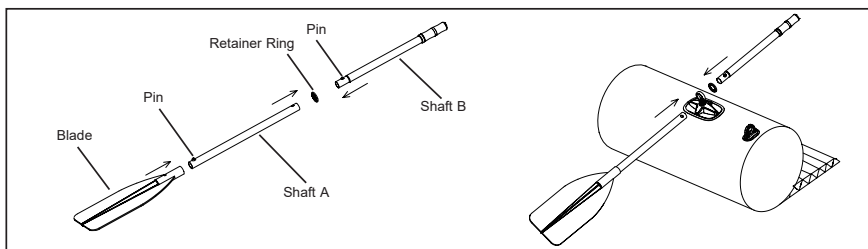
**SAVE THESE INSTRUCTIONS**

## FOR MARINER 3 & 4:

98  
A

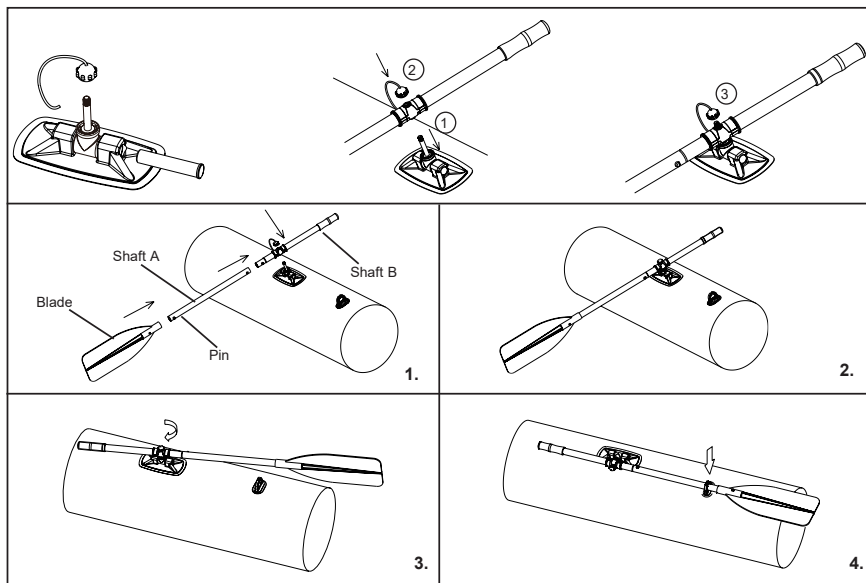

## FRENCH OARS:

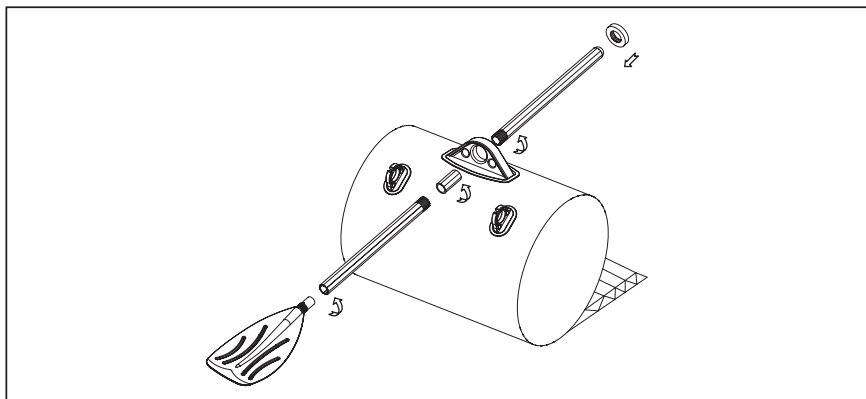


# SAVE THESE INSTRUCTIONS


**Grab Line Installation (Certain Models):**

**IMPORTANT:** To properly install the inflatable boat's grab line and/or accessory lines, first inflate the boat.

If is necessary, begin the grab line installation at the rear of the boat by threading it through the rope holders completely around the outside of the boat. Tie the two loose ends in a square knot at the rear end of the boat.

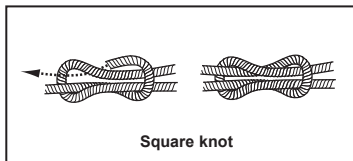**Accessory Line Installation (Certain Models):**

Your boat may have accessory lines to install. Tie a figure eight knot into one end of the accessory line and slide it through the rope holders. Tie a figure eight knot in the remaining end of the rope. The accessory bags may or may not be attached to the accessory lines. Slide the rope through the accessory bags while installing the accessory lines, if desired.

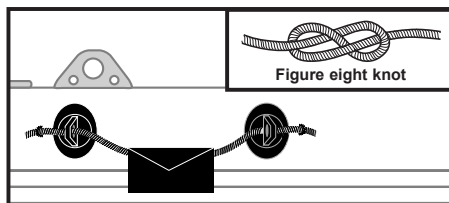**Safety and Operating Instructions****Before Departing from the Shore or Dock****Know all required information and inform your passengers:**

- Take a boating safety course and get hands-on training from your boat dealer or local boating authorities.
- Know all local regulations and hazards related to water activities and boat operation.
- Check weather forecast, local currents, tides and wind conditions.
- Advise someone on land of the time you plan to be back at your starting point.
- Explain basic boat operation to all passengers.
- Children and non-swimmers need special instructions in the use of life jacket or personal flotation devices (PFD).
- Be sure that one of your passengers can operate the boat in case of emergency.
- Learn how to determine the distance you can cover, and remember that bad weather conditions can alter this.
- Review all safety requirements regularly.

**Check the working condition of the boat and equipments:**

- Check inflation pressure.
- Inspect the valves caps.
- Check the load is evenly distributed, fore (front) to aft (back) and side-to-side.

**Make sure that all required safety equipment is on board (check the laws and regulations of the country or locality in which you are boating to see if additional equipment may be needed):**

- One personal flotation device (PFD) per person.
- Air pump, oars, repair kit and tool kit.
- Any other mandatory equipment.
- The boat papers and your boating license (if applicable).
- Lights are required if operating after dark.

## SAVE THESE INSTRUCTIONS

## Rules to Observe During Navigation

- Be responsible, do not neglect the safety rules, this could jeopardize your life and the lives of others.
- Always keep control of your boat.
- Respect local regulations and practices.
- Near the shore, navigate in the designated boating area.
- Remember that weather conditions can rapidly deteriorate. Always be sure that you can reach a shelter rapidly.
- Everyone on board must always wear a personal flotation device (PFD).
- Do not drink alcohol or take drugs before or while operating your boat. Maintain passenger sobriety.
- Do not exceed the authorized number of persons or weight.
- Make sure your passengers remain seated at all times. At planning speeds, in rough water or during sharp turns, all passengers should position themselves in seats or on the floor.
- No bow riding. Bow riding is illegal in most areas and is extremely dangerous. In case of falling, the man overboard is in the way of the propeller.
- Be especially careful when docking. Arms and legs may be injured if they are outside the boat.
- Keep clear of swimmers and divers. Always avoid areas where divers/swimmers are in the water.
- Keep a sharp lookout especially when operating near beaches and launch sites. The Alpha flag indicates proximity of divers. You MUST maintain a safe distance as required by your local boating laws, which may range from 50 meters (164 feet) to 91 meters (300 feet).
- Avoid sharp turns at high speeds. You could get ejected from the boat.
- Do not make changes in direction without advising passengers.
- Avoid all contact between the buoyancy tubes and sharp objects or aggressive liquids (such as acid).
- Do not smoke on board. Most importantly while filling the fuel tank.
- Any fuel spilled must be cleaned and disposed of according to local laws and regulations.

## Reboarding your boat

All around grab line is provided to assist with reboarding the boat. Grabbing the line and pulling yourself inside the cockpit is easiest to perform over the port and starboard (left and right) sides of the boat. Pay attention to all safety information and warnings on your boat and never approach the boat from the stern (back side) when a motor is installed.

## Care and Maintenance

The boat is made of the highest quality materials and complies with ISO 6185 standards. Altering the construction of the boat will endanger your own safety, safety of the occupants and void the limited warranty!

There is very little that you have to do to keep your boat in good condition for many years. You may store it inflated or deflated. If you leave it outside, raise it up off the ground and do not place any heavy or sharp objects on it. If it is going to be in direct sunlight or exposed to leaves or rain, cover it with a tarp. We do not recommend hanging the boat. If you store it in a closet, basement or garage, we suggest you pick a cool, dry place, making sure the boat is clean and dry before you store it - or mold can accumulate.

Use as few cleaning agents as possible, do not discharge waste agents into water, and clean your boat preferably on land.

Clean your boat after a trip to prevent damage from sand, salt water or sun exposure.

Most dirt can be removed with a garden hose, a sponge and mild soap. Make sure the boat is completely dry before storing. Store the product and accessories in a dry, temperature controlled, between 32 degrees Fahrenheit (0 degrees Celsius) and 104 degrees Fahrenheit (40 degrees Celsius) storage location.

# SAVE THESE INSTRUCTIONS

## **Disassembly and Storage**

First clean your boat thoroughly following the Care and Maintenance instructions. Open all air valves and deflate boat completely. Remove all the accessories from the boat; seats, fishing rod holders, oars, gear pouch and battery pouch.

Fold the left and right chambers of the boat towards the middle of the floor. It is not necessary to remove the slats to fold the boat. Fold the bow end twice to the middle of the boat tightly while forcing out any remaining air; repeat this procedure for the stern. With two opposing folded sides, fold one end over the other like closing a book. Replace all inflation valve caps. Your boat is ready for storage. Fold the boat loosely and avoid sharp bends, corners and creases which can damage the boat.

## **Troubleshooting**

If your boat appears a bit soft, it might not be because of a leak. If the boat was inflated late in the day with 32°C (90°F) air, that air might cool down to 25°C (77°F) overnight. The cooler air exerts less pressure on the hull, so it could appear soft the next morning.

If there has been no temperature variation, you need to start looking for a leak:

- Take a good look at your boat from just a few feet away. Flip it over and closely check over the outside. Any large leaks should be clearly visible.
- If you have an idea where your leak is, use a mix of dishwashing liquid and water in a spray bottle, and spray over the suspicious areas. Any leak will produce bubbles that will pinpoint the location of the leak.
- Check valves for leak, if necessary, spray soapy water around the valve and the valve base.

## **Repairs**

Through constant use you may occasionally puncture your boat. Most leaks only take a few minutes to repair. Your boat comes with a repair patch, and additional repair supplies can be ordered from Intex Consumer Service or from our website.

First locate the leak; soapy water will bubble out from the source of the leak. Thoroughly clean the area surrounding the leak to remove any dirt or grime.

Cut a piece of repair patch large enough to overlap the damaged area by approximately 1.5 cm (1/2"). Round off the edges, and place the patch on the damaged area and press down firmly. You may want to use a weight on top to keep it in place.

Do not inflate in 30 minutes after patching.

If the patch does not hold, you can purchase a PVC or silicon based glue for repairing camping mats, tents or shoes from your local market to patch your boat, please refer to the instruction of the glue for patching.

# **SAVE THESE INSTRUCTIONS**

## Limited Warranty

### Intex Inflatable Boat

98  
A

Your Intex Inflatable Boat has been manufactured using the highest quality materials and workmanship. All Intex Inflatable Boats have been inspected and found free of defects prior to leaving the factory. This limited warranty applies to the Intex Inflatable Boat only.

This limited warranty is in addition to, and not a substitute for, your legal rights and remedies. To the extent that this warranty is inconsistent with any of your legal rights, they take priority. For example, consumer laws across the European Union provide statutory warranty rights in addition to the coverage you receive from this limited warranty: for information on EU-wide consumer laws, please visit the European Consumer Center website at [http://ec.europa.eu/consumers/ecc/contact\\_en/htm](http://ec.europa.eu/consumers/ecc/contact_en/htm).

The provisions of this limited warranty apply only to the original purchaser. This Limited Warranty is valid for a period of 1 year from the date of purchase. Keep your purchase information with this document, as proof of purchase will be required and must accompany warranty claims or the limited warranty will be invalid.

If you find a manufacturing defect in the Intex Inflatable Boat during the warranty period, please contact the appropriate Intex Service Center listed in the separate "Authorized Service Centers" sheet. If the item is returned as directed by the Intex Service Center, the Service Center will inspect the item and determine the validity of the claim. If the item is covered by the provisions of the warranty, the item will be repaired or replaced, with the same or comparable item (at Intex's choice) at no charge to you.

Other than this warranty, and other legal rights in your country, no further warranties are implied. To the extent possibly in your country, in no event shall Intex be liable to you or any third party for direct or consequential damages arising out of the use of your Intex Inflatable Boat, or Intex or its agents' and employees' actions (including the manufacture of the product). If your country does not allow the exclusion or limitation of incidental or consequential damages, this limitation or exclusion does not apply to you.

You should note that this limited warranty does not apply in the following circumstances:

- If the Intex Inflatable Boat is subject to negligence, abnormal use or application, accident, improper operation, trailering or towing, improper maintenance or storage;
- If the Intex Inflatable Boat is subject to damage by circumstances beyond Intex's control, including but not limited to, punctures, tears, abrasions, or ordinary wear and tear;
- To parts and components not sold by Intex; and/or
- To unauthorized alterations, repairs or disassembly to the boat by anyone other than Intex Service Center personnel.

Read the owner's manual carefully and follow all instructions regarding proper operation and maintenance of your Intex Inflatable Boat. Always inspect your equipment prior to use. This limited warranty will be void if use instructions are not followed.

RECORD THE OWNER'S NAME, ADDRESS, PHONE NUMBER AND **WIN** BELOW:

---



---



---



---



---

## SAVE THESE INSTRUCTIONS

English

227

EU Declaration of Conformity of Recreational Craft with the Design, Construction and Noise Emission requirements of Directive 2013/53/EU

(To be completed by manufacturer or if mandated, authorised representative)

Name of recreational craft manufacturer: Intex Industries (Fujian) Co., Ltd.  
Address: Shangzheng, Honglu  
Town: Fuqing, Fujian Post Code: 350301 Country: P. R. of China

Name of Authorised Representative (if applicable): Intex Trading B.V.  
Address: 4700 BB Roosendaal  
Town: Post Code: P.B. Box 1075 Country: Netherlands

Module used for design and construction assessment: ☒ A ☐ A1 ☐ B+C ☐ B+D ☐ B+E ☐ B+F ☐ G ☐ H  
Name of Notified Body for design and construction assessment (if applicable): N/A  
Address:  
Town: Post Code: Country: ID Number:  
Notified Body certificate number (if applicable): Date: / /

Module used for noise emission assessment (if applicable): ☐ A ☐ A1 ☐ G ☐ H  
Name of Notified Body for noise emission assessment (if applicable): N/A  
Address:  
Town: Post Code: Country: ID Number:  
Notified Body certificate number (if applicable): Date: / /

Other Community Directives applied:

DESCRIPTION OF RECREATIONAL CRAFT  
Watercraft Identification Number

C N X E E  
(See product and/or packaging)

Brand name of the recreational craft: See Table 1

Type of Construction:  
☐ Rigid ☒ Inflatable  
☐ Rigid - inflatable (RIB)

Type of hull:  
☒ Monohull ☐ Multihull

Hull Construction material:  
☐ Aluminium, aluminium alloys ☒ Moulded, fiber reinforced plastic  
☐ Steel, steel alloys ☐ Wood  
☐ Other (specify):

Recreational Craft  
Design category(-ies) related to the maximum recommend number of persons (See Table 1):

Engine power: Max. Recommended: 1.1 kW,  
Installed: kW (if applicable)

Length of hull L<sub>a</sub>: m Beam of hull B<sub>a</sub>: m

Max. Draught T: m (See Table 1)

Integral exhaust propulsion (if applicable): Yes ☐ No ☐

Maximum Recommended engine power: kW

Installed engine power: kW

Number of propulsion engines: #

Maximum recommended engine mass: kg

Type or number: See Table 1

Craft main Propulsion:  
☐ Sails, projected sail area As m<sup>2</sup>  
☒ Human propulsion  
☒ Engine/motor propulsion  
☐ Other (specify):

Installed propulsion type (if applicable):  
☒ Outboard ☐ Inboard with shaft line  
☐ Z or sterndrive ☐ Pod drive  
☐ Sail derive  
☐ Other (specify):

Installed engine type (if applicable):  
☐ Internal combustion, Diesel (CI)  
☐ Internal combustion, Petrol (SI)  
☐ Internal combustion, LPG/CNG  
☐ Electric  
☐ Other (specify):

Deck:  
☒ Fully enclosed ☐ Partially protected  
☒ Open

This declaration of conformity is issued under the sole responsibility of the manufacturer. I declare on behalf of the manufacturer that the recreational craft mentioned above fulfils the requirements specified in Article 4 (1) and Annex I of Directive 2013/53/EU.

Name and function: John Lee (QA Manager)  
(identification of the person empowered to sign on behalf of the manufacturer or his authorised representative)

Signature and title: John Lee (QA Manager)  
(or an equivalent marking)

Date and place of issue: P. R. of China (yr/month/day) 2024 / 06 / 30

227-\*\*\*-R0-2502

| Essential requirements<br>(Reference to relevant articles in Annex IA & IC of the Directive) | Harmonised standards<br>Full Application                     | Harmonised standards<br>Partial Application, see tech. file | Other reference documents<br>Full Application | Other reference documents<br>Partial Application, see tech. file | Other proof of conformity<br>See technical file | Specify the harmonised standards or other reference documents used<br>(with year of publication like "EN ISO 8666:2020 +A11:2021") |
|----------------------------------------------------------------------------------------------|--------------------------------------------------------------|-------------------------------------------------------------|-----------------------------------------------|------------------------------------------------------------------|-------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|
| <b>General requirements (2)</b>                                                              |                                                              |                                                             |                                               |                                                                  |                                                 |                                                                                                                                    |
| Principal data – main dimensions                                                             | <input checked="" type="checkbox"/>                          |                                                             |                                               |                                                                  |                                                 | EN ISO 8666:2020 +A11:2021                                                                                                         |
| Watercraft identification (2.1)                                                              | <input checked="" type="checkbox"/>                          |                                                             |                                               |                                                                  |                                                 | EN ISO 10087:2022                                                                                                                  |
| Watercraft builder's plate (2.2)                                                             | <input checked="" type="checkbox"/>                          | <input type="checkbox"/>                                    | <input type="checkbox"/>                      | <input type="checkbox"/>                                         | <input type="checkbox"/>                        | EN ISO 6185-1:2018                                                                                                                 |
| Protection from falling overboard and means of reboarding (2.3)                              | <input checked="" type="checkbox"/>                          | <input type="checkbox"/>                                    | <input type="checkbox"/>                      | <input type="checkbox"/>                                         | <input type="checkbox"/>                        | EN ISO 6185-1:2018                                                                                                                 |
| Visibility from the main steering position (2.4)                                             | <input type="checkbox"/>                                     | <input type="checkbox"/>                                    | <input type="checkbox"/>                      | <input type="checkbox"/>                                         | <input type="checkbox"/>                        | N/A                                                                                                                                |
| Owner's manual (2.5)                                                                         | <input checked="" type="checkbox"/>                          | <input type="checkbox"/>                                    | <input type="checkbox"/>                      | <input type="checkbox"/>                                         | <input type="checkbox"/>                        | EN ISO 6185-1:2018                                                                                                                 |
| <b>Integrity and structural requirements (3)</b>                                             |                                                              |                                                             |                                               |                                                                  |                                                 |                                                                                                                                    |
| Structure (3.1)                                                                              | <input checked="" type="checkbox"/>                          | <input type="checkbox"/>                                    | <input type="checkbox"/>                      | <input type="checkbox"/>                                         | <input type="checkbox"/>                        | EN ISO 6185-1:2018                                                                                                                 |
| Stability and freeboard (3.2)                                                                | <input checked="" type="checkbox"/>                          | <input type="checkbox"/>                                    | <input type="checkbox"/>                      | <input type="checkbox"/>                                         | <input type="checkbox"/>                        | EN ISO 6185-1:2018                                                                                                                 |
| Buoyancy and flotation (3.3)                                                                 | <input checked="" type="checkbox"/>                          | <input type="checkbox"/>                                    | <input type="checkbox"/>                      | <input type="checkbox"/>                                         | <input type="checkbox"/>                        | EN ISO 6185-1:2018                                                                                                                 |
| Openings in hull, deck and superstructure (3.4)                                              | <input type="checkbox"/>                                     | <input type="checkbox"/>                                    | <input type="checkbox"/>                      | <input type="checkbox"/>                                         | <input type="checkbox"/>                        | N/A                                                                                                                                |
| Flooding (3.5)                                                                               | <input type="checkbox"/>                                     | <input type="checkbox"/>                                    | <input type="checkbox"/>                      | <input type="checkbox"/>                                         | <input type="checkbox"/>                        | N/A                                                                                                                                |
| Manufacturer's maximum recommended load (3.6)                                                | <input checked="" type="checkbox"/>                          | <input type="checkbox"/>                                    | <input type="checkbox"/>                      | <input type="checkbox"/>                                         | <input type="checkbox"/>                        | EN ISO 6185-1:2018                                                                                                                 |
| Liferaft stowage (3.7)                                                                       | <input type="checkbox"/>                                     | <input type="checkbox"/>                                    | <input type="checkbox"/>                      | <input type="checkbox"/>                                         | <input type="checkbox"/>                        | N/A                                                                                                                                |
| Escape (3.8)                                                                                 | <input type="checkbox"/>                                     | <input type="checkbox"/>                                    | <input type="checkbox"/>                      | <input type="checkbox"/>                                         | <input type="checkbox"/>                        | N/A                                                                                                                                |
| Anchoring, mooring and towing (3.9)                                                          | <input checked="" type="checkbox"/>                          | <input type="checkbox"/>                                    | <input type="checkbox"/>                      | <input type="checkbox"/>                                         | <input type="checkbox"/>                        | EN ISO 6185-1:2018                                                                                                                 |
| <b>Handling characteristics (4)</b>                                                          | <input checked="" type="checkbox"/>                          | <input type="checkbox"/>                                    | <input type="checkbox"/>                      | <input type="checkbox"/>                                         | <input type="checkbox"/>                        | EN ISO 6185-1:2018                                                                                                                 |
| <b>Engines and engine spaces (5.1)</b>                                                       |                                                              |                                                             |                                               |                                                                  |                                                 |                                                                                                                                    |
| Inboard engine (5.1.1)                                                                       | <input type="checkbox"/>                                     | <input type="checkbox"/>                                    | <input type="checkbox"/>                      | <input type="checkbox"/>                                         | <input type="checkbox"/>                        | N/A                                                                                                                                |
| Ventilation (5.1.2)                                                                          | <input type="checkbox"/>                                     | <input type="checkbox"/>                                    | <input type="checkbox"/>                      | <input type="checkbox"/>                                         | <input type="checkbox"/>                        | N/A                                                                                                                                |
| Exposed parts (5.1.3)                                                                        | <input type="checkbox"/>                                     | <input type="checkbox"/>                                    | <input type="checkbox"/>                      | <input type="checkbox"/>                                         | <input type="checkbox"/>                        | N/A                                                                                                                                |
| Outboard engine starting (5.1.4)                                                             | <input type="checkbox"/>                                     | <input type="checkbox"/>                                    | <input type="checkbox"/>                      | <input type="checkbox"/>                                         | <input type="checkbox"/>                        | N/A                                                                                                                                |
| <b>Fuel system (5.2)</b>                                                                     |                                                              |                                                             |                                               |                                                                  |                                                 |                                                                                                                                    |
| General – fuel system (5.2.1)                                                                | <input type="checkbox"/>                                     | <input type="checkbox"/>                                    | <input type="checkbox"/>                      | <input type="checkbox"/>                                         | <input type="checkbox"/>                        | N/A                                                                                                                                |
| Fuel tanks (5.2.2)                                                                           | <input type="checkbox"/>                                     | <input type="checkbox"/>                                    | <input type="checkbox"/>                      | <input type="checkbox"/>                                         | <input type="checkbox"/>                        | N/A                                                                                                                                |
| <b>Electrical systems (5.3)</b>                                                              | <input type="checkbox"/>                                     | <input type="checkbox"/>                                    | <input type="checkbox"/>                      | <input type="checkbox"/>                                         | <input type="checkbox"/>                        | N/A                                                                                                                                |
| <b>Steering systems (5.4)</b>                                                                |                                                              |                                                             |                                               |                                                                  |                                                 |                                                                                                                                    |
| General – steering system (5.4.1)                                                            | <input type="checkbox"/>                                     | <input type="checkbox"/>                                    | <input type="checkbox"/>                      | <input type="checkbox"/>                                         | <input type="checkbox"/>                        | N/A                                                                                                                                |
| Emergency arrangements (5.4.2)                                                               | <input type="checkbox"/>                                     | <input type="checkbox"/>                                    | <input type="checkbox"/>                      | <input type="checkbox"/>                                         | <input type="checkbox"/>                        | N/A                                                                                                                                |
| <b>Gas systems (5.5)</b>                                                                     | <input type="checkbox"/>                                     | <input type="checkbox"/>                                    | <input type="checkbox"/>                      | <input type="checkbox"/>                                         | <input type="checkbox"/>                        | N/A                                                                                                                                |
| <b>Fire protection (5.6)</b>                                                                 |                                                              |                                                             |                                               |                                                                  |                                                 |                                                                                                                                    |
| General – fire protection (5.6.1)                                                            | <input type="checkbox"/>                                     | <input type="checkbox"/>                                    | <input type="checkbox"/>                      | <input type="checkbox"/>                                         | <input type="checkbox"/>                        | N/A                                                                                                                                |
| Fire-fighting equipment (5.6.2)                                                              | <input type="checkbox"/>                                     | <input type="checkbox"/>                                    | <input type="checkbox"/>                      | <input type="checkbox"/>                                         | <input type="checkbox"/>                        | N/A                                                                                                                                |
| <b>Navigation lights, shapes and sound signals (5.7)</b>                                     | <input type="checkbox"/>                                     | <input type="checkbox"/>                                    | <input type="checkbox"/>                      | <input type="checkbox"/>                                         | <input type="checkbox"/>                        | N/A                                                                                                                                |
| <b>Discharge prevention (5.8)</b>                                                            | <input type="checkbox"/>                                     | <input type="checkbox"/>                                    | <input type="checkbox"/>                      | <input type="checkbox"/>                                         | <input type="checkbox"/>                        | N/A                                                                                                                                |
| <b>Annex I.B – Exhaust Emissions</b>                                                         | See the Declaration of Conformity of the engine manufacturer |                                                             |                                               |                                                                  |                                                 |                                                                                                                                    |
| <b>Annex I.C – Noise Emissions<sup>1</sup></b>                                               | <input type="checkbox"/>                                     | <input type="checkbox"/>                                    | <input type="checkbox"/>                      | <input type="checkbox"/>                                         | <input type="checkbox"/>                        | N/A                                                                                                                                |
| Noise emission levels (I.C.1)                                                                | <input type="checkbox"/>                                     | <input type="checkbox"/>                                    | <input type="checkbox"/>                      | <input type="checkbox"/>                                         | <input type="checkbox"/>                        | N/A                                                                                                                                |
| Owner's manual (I.C.2)                                                                       | <input type="checkbox"/>                                     | <input type="checkbox"/>                                    | <input type="checkbox"/>                      | <input type="checkbox"/>                                         | <input checked="" type="checkbox"/>             | N/A                                                                                                                                |

<sup>1</sup> Only to be completed for boats with inboard engines or sterndrive engines without integral exhaust.

| Table 1 | Brand name of the craft | Type | L <sub>n</sub> (m) | B <sub>n</sub> (m) | T (m) | Category | Number of persons | Max Load (kg) |
|---------|-------------------------|------|--------------------|--------------------|-------|----------|-------------------|---------------|
| 1       | Challenger 3            | II   | 2.95               | 1.37               | N/A   | D        | 3                 | 320           |
| 2       | Challenger 3 Set        | II   | 2.95               | 1.37               | N/A   | D        | 3                 | 320           |
| 3       | Seahawk 3               | II   | 2.95               | 1.37               | N/A   | D        | 3                 | 360           |
| 4       | Seahawk 4               | II   | 3.51               | 1.45               | N/A   | D        | 4                 | 480           |
| 5       | Seahawk 3 Set           | II   | 2.95               | 1.37               | N/A   | D        | 3                 | 360           |
| 6       | Seahawk 4 Set           | II   | 3.51               | 1.45               | N/A   | D        | 4                 | 480           |
| 7       | Excursion 4 Set         | II   | 3.15               | 1.65               | N/A   | D        | 4                 | 500           |
| 8       | Excursion 5 Set         | II   | 3.66               | 1.68               | N/A   | D        | 5                 | 600           |